



Start System - press anywhere on the touch panel

Presentation Controls

1 Blank Screens Turn off all displays (press again to restore) while the PC remains on

2 Volume Adjust or mute program audio

Display Source Controls

3 Computer Source Show display from the classroom PC. This PC is installed with conferencing apps and annotation software

4 Laptop Source Select to display laptop from a connected laptop (HDMI and USB cables on or under table)

5 Document Camera Display documents or objects for in-class or online participants

Press Shutdown → Confirm YES to power off audio/video

Classroom Features

Software

PC is installed with Ink2go for annotating and recording classes and ZOOM for conferencing and remote participation

Document Camera

Display or annotate physical documents by placing them under the document camera

Computer Mounted Camera

Webcam mounted on the monitor is designed to capture the instructor's image and voice when at the teaching console.

HDMI Connections

Connect your own laptop with built in HDMI cables.

Troubleshooting Tips

Can't connect to wi-fi

Connect to the "eduroam" WiFi network, log in using your GMU email (i.e. netid@gmu.edu) and password

No Audio in Zoom/Teams

Set speaker and microphone settings within the conferencing software to "AV Bridge" or "Crestron"

No Sound from connected laptop

Set device audio output device to "Crestron"

Can't see Doc Cam in Zoom/Teams

Set the camera within the software to the document camera. Then share your screen within the software



Scan this QR code to see more details about classroom features and resources

