



Start System - press anywhere on the touch panel

Presentation Controls

- 1 Blank Screens** Turn off all displays (press again to restore) while the PC remains on
- 2 Volume** Adjust or mute program audio

Display Source Controls

- 3 Computer Source** Show display from the classroom PC. This PC is installed with conferencing apps and annotation software
- 4 Laptop Source** Select to display laptop from a connected laptop (HDMI and USB cables on or under table)
- 5 Wireless** Present wirelessly from anywhere in the room using any tablet, mobile device, or laptop. See separate guide for detailed connection instructions
- 6 Document Camera** Display documents or objects for in-class or online participants

Press Shutdown → Confirm YES to power off audio/video

Classroom Features

Software

- PC is installed with Ink2go for annotating and recording classes and ZOOM for conferencing and remote participation

Document Camera

- Display or annotate physical documents by placing them under the document camera

Wireless Sharing

- Share your device screen wirelessly from a tablet or mobile device by selecting "Wireless" on the touch panel.

Computer Mounted Camera

- Webcam mounted on the monitor is designed to capture the instructor's image and voice when at the teaching console.

HDMI Connections

- Connect your own laptop with built in HDMI cables.

Troubleshooting Tips

Can't connect to wi-fi

- Connect to the "eduroam" WiFi network, log in using your GMU email (i.e. netid@gmu.edu) and password

No Audio in Zoom/Teams

- Set speaker and microphone settings within the conferencing software to "AV Bridge" or "Crestron"

No Sound from connected laptop

- Set device audio output device to "Crestron"

Can't see Doc Cam in Zoom/Teams

- Set the camera within the software to the document camera. Then share your screen within the software



Scan this QR code to see more details about classroom features and resources

