



Classroom Features

- Software**
 - PC is installed with Ink2go for annotating and recording classes and ZOOM for conferencing and remote participation
- Wireless Sharing**
 - Share your device screen wirelessly from a tablet or mobile device by selecting "Wireless" on the touch panel.
- Document Camera**
 - Display or annotate physical documents by placing them under the document camera and selecting "Doc Cam"
- Microphones for In-Room use**
 - Use the lapel, or handheld microphone to improve sound coverage
- Microphones for Online use**
 - Ceiling mounted microphones capture your voice for Zoom/Teams meetings.
- Video Wall**
 - Use the video wall to display in a variety of configurations.

Troubleshooting Tips

- Can't connect to wireless sharing**
 - Connect to the "eduroam" WiFi network, log in using your GMU email (i.e. netid@gmu.edu) and password
- No Audio in Zoom/Teams**
 - Set speaker and microphone settings within the conferencing software to "AV Bridge" or "Crestron"
- No Sound from connected laptop**
 - Set device audio output to "Crestron"
- Personal wireless mic doesn't work**
 - This system does not support personal mics; Contact support for assistance
- Can't see Doc Cam in Zoom/Teams**
 - Set the camera within the software to the document camera, then share your screen
- Can't see in room cameras on connected laptop**
 - Use the in room computer to use the in room cameras or microphones in Zoom/Teams

Start System - press anywhere on the touch panel

Display Instructions

1 Blank Screens Temporarily turn off all displays (press again to restore)

2 Video Wall mode Select the display setting for the video wall. Choose Single Presentation: One centered display
Stretched: Extend one source to the entire wall
Dual: Select separate sources for each side of the wall

Display Source

Select the source to display on the video wall. Select from the PC display, HDMI connected laptop, Wireless, or Document Camera

Sound and Camera Settings

4 Microphones Mute/unmute and adjust volume for each microphones

5 Camera Controls Adjust camera (tilt, pan, zoom) and save/recall preset camera positions

6 Volume Adjust or mute program audio

 Press Shutdown → Confirm YES to power off audio/video



Scan this QR code to see more details about classroom features and resources

