



## Start System - press anywhere on the touch panel

- 1 Blank Screens** Temporarily turn off all displays (press again to restore)
- 2 Volume** Adjust or mute program audio
- 3 Camera Controls** Adjust camera (tilt, pan, zoom) and enable/disable tracking
- 4 Microphone Controls** Mute/unmute and adjust volume for each microphone
- 5 Display Controls** Use each side to control each of the rooms displays independently from each other
- 6 Computer Source** Show display from the classroom PC. Select main to mirror your current display, or Extended to act as a secondary display
- 7 Laptop** Mirror the display of a connected laptop on the display. HDMI cable located on the lectern
- 8 Document Camera** Display documents or objects for in-class or online participants
- 9 Wireless** Present wirelessly from anywhere in the room using any tablet, mobile device, or laptop. See separate guide for detailed connection instructions

## Classroom Features

- **Software**  
PC is installed with Ink2go for annotating and recording classes and ZOOM for conferencing and remote participation
- **Wireless Sharing**  
Share your device screen wirelessly from a tablet or mobile device by selecting "Wireless" on the touch panel.
- **Document Camera**  
Display or annotate physical documents by placing them under the document camera and selecting "Doc Cam"
- **Microphones for Online use**  
Ceiling mounted microphones capture your voice for Zoom/Teams meetings.
- **Microphones for In-Room use**  
Use the lapel, handheld or lectern microphone for better speech in the room
- **Tracking Cameras**  
Cameras follow your movement by default, tracking settings can be adjusted in the camera control menu.

## Troubleshooting Tips

- **Can't connect to wireless sharing**  
Connect to the "eduroam" WiFi network, log in using your GMU email (i.e. netid@gmu.edu) and password
- **No Audio in Zoom/Teams**  
Set speaker and microphone settings within the conferencing software to "AV Bridge" or "Crestron"
- **No Sound from connected laptop**  
Set device audio output device to "Crestron"
- **Extended display is blank**  
Open windows display settings to verify display layout and drag material to share onto the extended display.
- **Can't see in room cameras on connected laptop**  
Use the in room computer to use the in room cameras or microphones in Zoom/Teams

 Press Shutdown → Confirm YES to power off audio/video



Scan this QR code to see more details about classroom features and resources

