



Start System - press anywhere on the touch panel

- 1 Blank Screens** Temporarily turn off all displays (press again to restore)
- 2 Volume** Adjust or mute program audio
- 3 Camera Controls** Adjust camera (tilt, pan, zoom) and enable/disable tracking
- 4 Computer Source** Show display from the classroom PC or from your personal laptop (use HDMI cable on lectern)
- 5 Wireless** Present wirelessly from anywhere in the room using any tablet, mobile device, or laptop. See separate guide for detailed connection instructions
- 6 Document Camera** Display documents or objects for in-room or online participants

Press Shutdown → Confirm YES to power off audio/video

Classroom Features

- Software**
PC is installed with Ink2go for annotating and recording classes and ZOOM for conferencing and remote participation
- Wireless Sharing**
Share your device screen wirelessly from a tablet or mobile device by selecting "Wireless" on the touch panel.
- Document Camera**
Display or annotate physical documents by placing them under the document camera and selecting "Doc Cam"
- Microphones for Online use**
Ceiling mounted microphones capture your voice for Zoom/Teams meetings.
- Tracking Cameras**
Cameras follow your movement by default, tracking settings can be adjusted in the camera control menu.

Troubleshooting Tips

- Can't connect to wireless sharing**
Connect to the "eduroam" WiFi network, log in using your GMU email (i.e. netid@gmu.edu) and password
- No Audio in Zoom/Teams**
Set speaker and microphone settings within the conferencing software to "AV Bridge" or "Crestron"
- No Sound from connected laptop**
Set device audio output device to "Crestron"
- Can't see Doc Cam in Zoom/Teams**
Set the camera within the software to the document camera, then share your screen
- Can't see in room cameras on connected laptop**
Use the in room computer to use the in room cameras or microphones in Zoom/Teams

Scan this QR code to see more details about classroom features and resources


