

PRESENTATION MODE




Default Starting Screen: When the system is started from the podium. The default landing screen is the presentation mode. The built in speakers default to the USB connection of Laptop 1

Presentation Mode: On this screen you will find quick access to the most often used sources to present onto the video walls located around the multi purpose facilities

- 1 **Blank Screens:** Press this button to temporarily turn off all displays, Press again to restore the displays
- 2 **Audio and Camera:** Use these menus to access the audio and video control, adjust or mute microphones and adjust camera position and tracking
- 3 **Volume:** Control the volume of the presenting source. This source can be selected in the room setup
- 4 **Sources and Destinations:** The most common sources are arranged in columns for each video destination. Scroll vertically to reveal more sources
- 5 **Video Wall Controls:** Configure the regions of display for the video walls see Video Wall controls for more info
- 6 **Routing Mode:** Press this to enter routing mode giving you more control over video sources and destinations.

ROUTING MODE

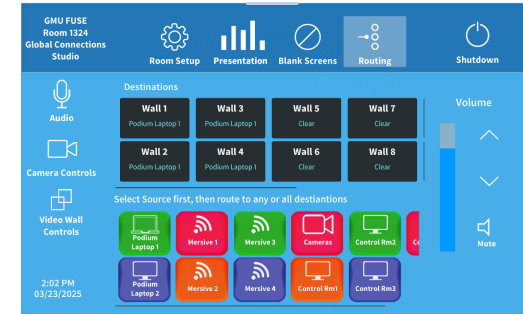

Routing Mode: Using this menu you can take finer control over what source is playing on what section of each video wall


Destinations: These are the available destinations that video can be sent to depending on the video wall settings

Sources: Here you can see a list of all available sources that can be assigned to the destinations above, includes all HDMI connections around the multi-purpose rooms, Wireless sharing, live camera feeds, or Control room PCs

How to assign sources: First, select the desired source from the list of sources. When selected the source will be highlighted with a white border. Then, Select a destination from the list to assign the selected source to the video wall section.

VIDEO WALL CONTROLS

Video Wall Controls: Choose how the multiple display destinations will be arranged on the Video Wall using the buttons on the left. Send a source to a destination by highlighting the source and touching the destination quadrant

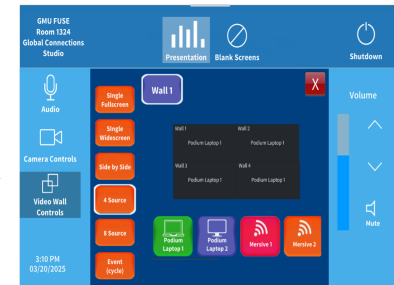

- Single full screen:** 1 source centered in a 16x9 window
- Single Wide Screen:** 1 source Stretched to fill the Video Wall
- Side By Side:** 2 sources next to each other
- 4 Sources:** up to 4 sources, displayed in each in a corner
- 8 Sources:** up to 8 sources, displayed in each in a corner
- “Event”(cycle):** More custom layouts available

TROUBLESHOOTING

- **No Audio from Laptop 1:** Audio routing can only be changed in the control room. Ensure the laptops audio device is set to “Crestron”
- **Missing Video Destinations:** Check the configuration in the video wall setup menu. More setup options are available in the control room



Scan this QR code to see more details about classroom features and resources

