


START HERE: ROOM CONFIGURATION

Room/Camera Configuration: Touch the control panel in the control to wake the system. Choose the desired room and camera layouts to match the current furniture layout

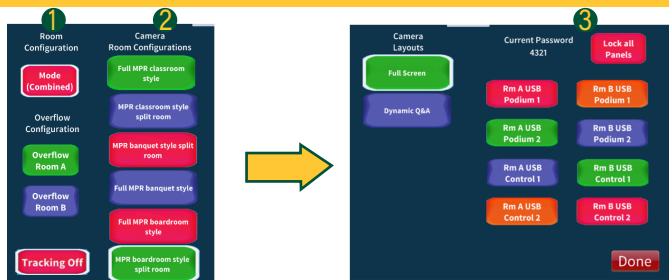


- Room Config:** Select the current layout of the room. Enable the overflow rooms to add their displays to available source routing
- Camera Config and Layout :** Select the appropriate camera layout from this column. After selecting this option camera tracking will be enabled
- Sound and USB Access:** Select the appropriate USB connection that will be attached to the audio and video peripheral. This will be the computer that broadcasts audio to the built in speakers around the Multi purpose room

AUDIO AND CAMERA CONTROLS

Audio Controls:

Use the up and down buttons to raise or lower the volume and the mute button to mute. Press the privacy button on at the top left to mute all microphones.

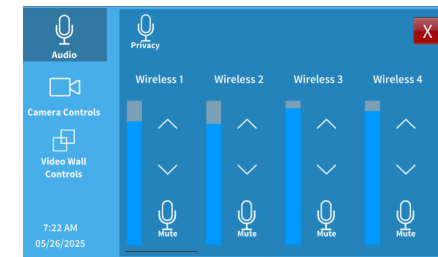


Camera Controls:

Select the desired camera from the list at the top of the menu, press and hold a one of the 3 preset buttons to save the current tilt pan and zoom settings to be recalled later. Use the PTZ Optics controller for more discrete control of the cameras. See PTZOptics control guide for operation instructions.



PRESENTATION MODE

Routing Mode: After completing the room setup you will be brought to the routing page, use this page to select which source will be displayed on which display

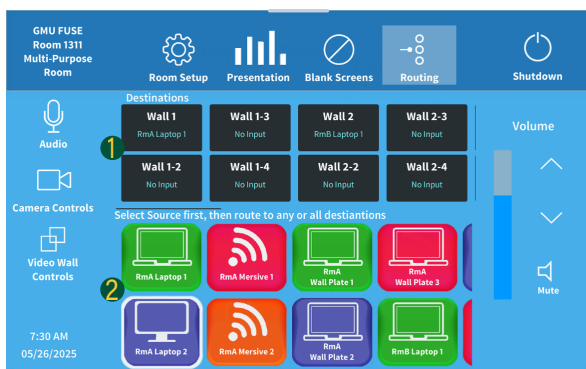

- Destinations:** These are the available destinations that video can be sent to depending on the video wall settings
- Sources:** Here you can see a list of all available sources that can be assigned to the destinations above, includes all HDMI connections around the multi-purpose rooms, Wireless sharing, live camera feeds, or Control room PCs
- How to assign sources:** First, select the desired source from the list of sources. When selected the source will be highlighted with a white border. Then, Select a destination from the list to assign the selected source to the video wall section.

VIDEO WALL CONTROLS

Video Wall Controls: Change the layout of the selected video wall using the orange buttons on the left. Send a source to a section of a video wall in the same way as the routing screen

Available Screen modes:


Single full screen: 1 input Source on the whole wall

PiP: 1 main Source with another in a corner

Side By Side: 2 sources next to each other

2 Source Event: Show one source as a background with another inlaid in within

4 Source Quad: Up to four sources displayed one in each corner of the video wall

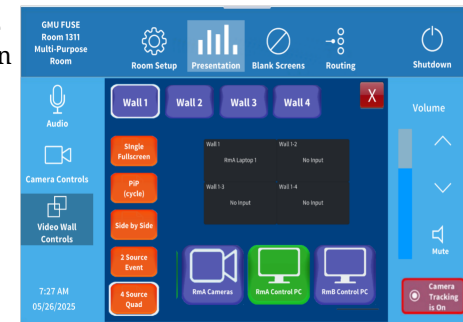

Scan this QR code to see more details about classroom features and resources

