

ROLAND DISPLAY AND CONTROLS




- 1 Two touchscreens allow you to view and customize your video output as well as control various settings by touching the displays
- 2 Window Position controls. Use these controls to adjust position, zoom and size of the elements in your video output
- 3 Display Menu controls, use these controls to access or exit the menu settings and adjust values highlighted on the touchscreen.

ROLAND AUDIO/VIDEO CONTROLS

- 4 **Microphone Faders:** Use these faders to control the volume of each of the microphones. The indicator light will change color based on the volume of the speaker. Red: Too high, Yellow: Suitable, Green: Too low
- 5 **Follow Button:** Switch between [Audio Follows Video]/[Video Follows Audio]/[Off] Lit Blue: The scene will automatically switch to in tandem with audio input Lit Orange: The audio output will automatically switch with the scenes
- 6 **Master Fader:** This Fader controls the final output of all the audio channels. Use the indicator lights to adjust to the ideal output level
- 7 **Scene Bank:** Use these buttons to select which scene (Preset video) will be output
- 8 **Transition controls:** Use these controls to customize the transition effect and speed when switching scenes.
- 9 **Auto Transition:** (Default: ON) When this is on the next scene is automatically switched to who selected using the scene bank controls
- 10 **Logo and Output fade:** Press the logo button to display a preselected logo on the output display. Press the fade button to fade out the audio and video output completely

TV SOURCE SELECTION

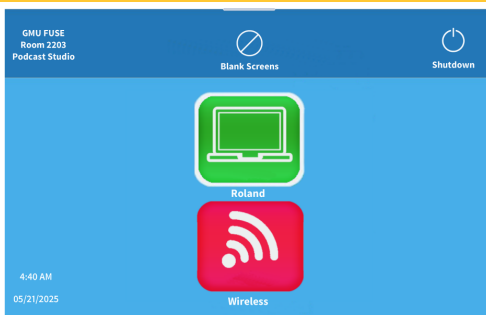

- Use the touch-pad located beside the mixing console to select the source on the display
- Select "Roland" to display the main output from the audio/video mixer
- Select "Wireless" to connect to the display using any Mobile device, Tablet, or Laptop
- Press "Blank Screens" to temporarily turn off the display, press again to turn the display back on

FEATURES AND TIPS

- Four guest workstations are equipped with their own microphone, headphone volume control, HDMI and USB port, and mute toggle
- The power switch for the Mixer is located on the back panel if you need to reboot the console.

Scan this QR code to see more details about classroom features and resources

