


Start System - press anywhere on the touch-panel (touchpanel located on the wall in the front of room)

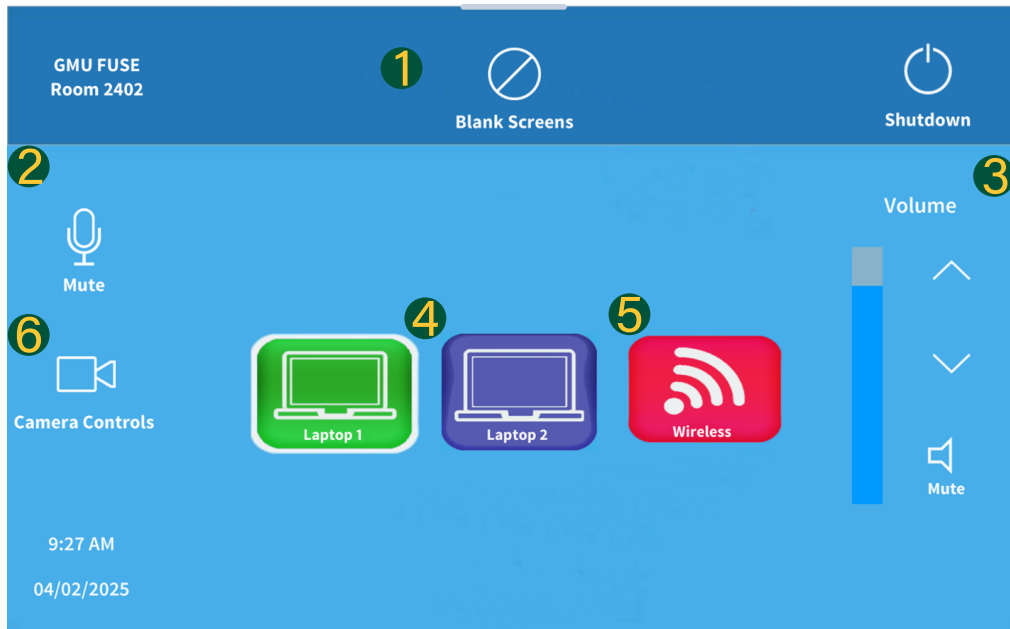

- 1 Blank Screens** Turn off all displays (press again to restore) while the PC remains on
- 2 Microphones** Mute or unmute the rooms built in microphones
- 3 Volume** Adjust or mute program audio
- 4 Laptop Source** Select to display laptop from a connected laptop (HDMI and USB cables on or under table)
- 5 Wireless** Flexibly present content from laptop or tablet from anywhere in the room
- 6 Camera Controls** Adjust view, zoom, pan, and enable/disable tracking

 Press Shutdown → Confirm YES to power off audio/video

### Classroom Features

- Laptop Connections**  
2 Laptop inputs are located at (or under) the table. Each input has an HDMI cable for video and program audio, and a USB cable for Camera, speakers and microphone connection
- Wireless Sharing**  
Share your device screen wirelessly from an iPad, phone, or computer by selecting "Wireless" on the touch panel.
- Microphones for Online Use**  
Ceiling mounted microphones capture your voice for Conferencing sessions
- High Definition Cameras Camera**  
There is one high-definition camera mounted in the front of the room to capture video for PC conferencing.
- Assisted Listening**  
Support participants with hearing needs. Please see the support office for device checkout.

### Troubleshooting Tips

- Can't connect to wireless sharing**  
Connect to the "eduroam" WiFi network, log in using your GMU email (i.e. netid@gmu.edu) and password
- No Audio or video in Zoom/Teams**  
Ensure both the HDMI and USB cables are connected then set speaker and microphone settings within the software to "AV Bridge"
- No Sound from connected laptop**  
Set Windows or Mac audio output device to "Crestron"
- Personal wireless mic doesn't work**  
This system does not support personal microphones; contact support for assistance

Scan this QR code to see more details about classroom features and resources

