

Classroom Touch Panel

*shown in Group Mode

Turn on System

Select Group Mode from the main standby screen

Select a Group

Tap the desired group icon from the center of the interface

The selected group will be outlined in white

This group will be shared to all displays

Return to Group

When a group is selected, the Return to Group option is shown

Press the group icon with "Yes" underneath


to return to showing each group on their respective display

Adjust Volume

Press the "up" and "down" arrows to adjust the system volume

Tap the speaker button below to mute and unmute the system

Turn off System

Tap Shutdown  icon in upper right corner of interface

Tap "YES" when prompted to power off system

1. Instruction Mode - Presentation - same source on all displays (see reverse for presentation mode instructions)
Group - group sources on all displays
2. Blank Screens - Black out the classroom displays
3. Shutdown - Access the shut down menu to end class
4. Microphones - Microphone volume controls
5. Camera Control - Camera selection and controls
6. Group Icons - Choose a group to share to all displays
7. Return to Group - Return to individual group mode
8. Volume - Volume control slider